

# UNIWELL POS AUSTRALIA

## SELF HELP

### PRESET TENDER



Details	Description
Revision No.	20210216
Hardware / Firmware	All HX Models – V4.00 to Current
Equipment	Uniwell POS Terminal
Author	GD

Requirements	Description
Pre Requisites	DISPLAY PROGRAMMING
Duration	Expected time to complete
Related Documents	
Additional Information	None


## Outcome

 *Fast tender keys in common denominations for the sales screen*

Program fast tender options on the sales screen to accept cash denominations for quick finalizing of sales. In Australia we use \$5, \$10, \$20, \$50 and \$100 notes as well \$1 and \$2 gold coins. The system allows for 5 preset tenders to be programmed in values best suited to your business.

### \*\*\* Start Of Self Help Instructions \*\*\*


1. Exit sales screen and Select the PROGRAM button.

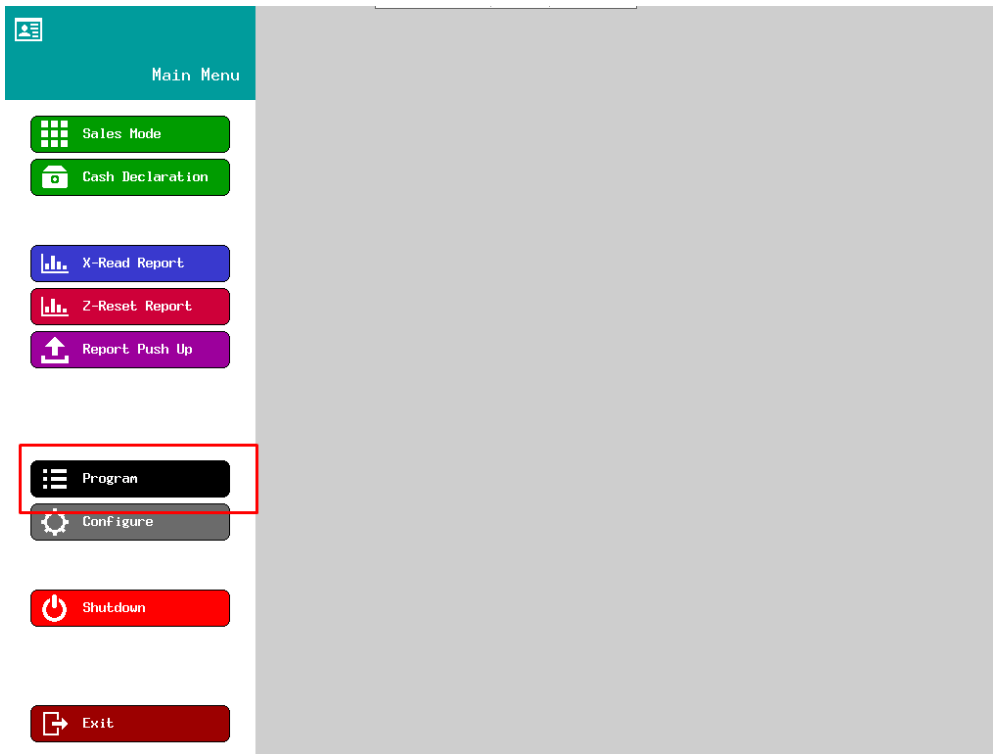


2. Press the Payment→Preset Tendering



3. Select on each tender, Rename each to suit and change the amount to equal the name. You can use the decimal point or enter the values in cents, i.e \$5 can be entered in as 5.00 or 500. Press OK to save and exit.

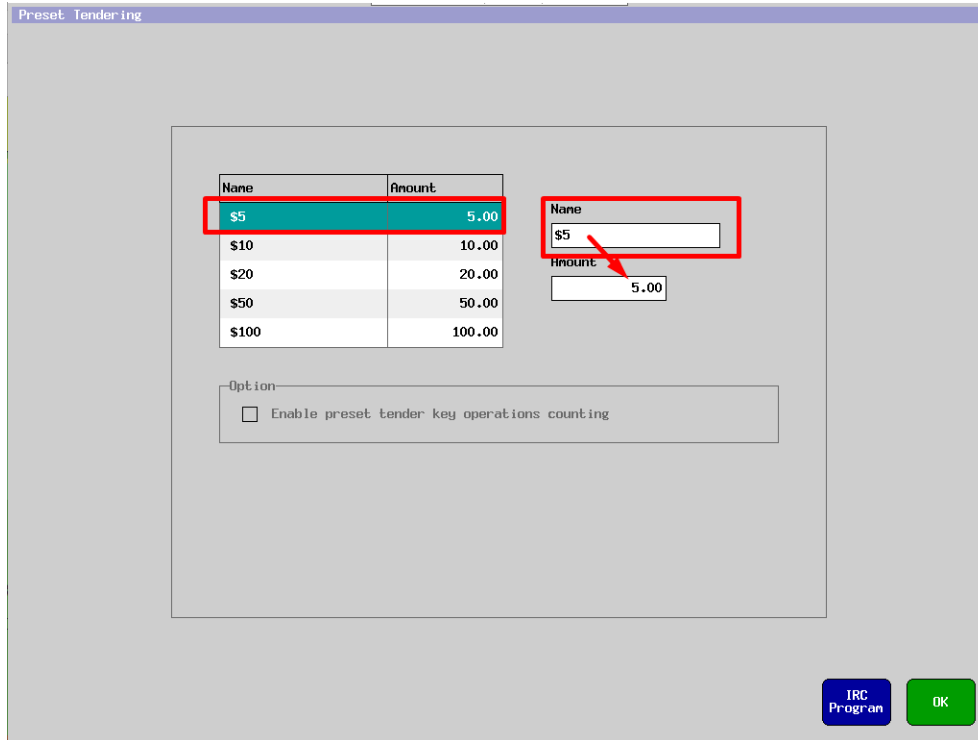

4. From the left press on display → screen layout
5. In the following press the following;
  - 5.1. Function page for the presets
  - 5.2. An empty spot for the preset
  - 5.3. From the list 'PRESET TENDER'
  - 5.4. 'ADD' button
  - 5.5. The empty spot were the preset will be placed

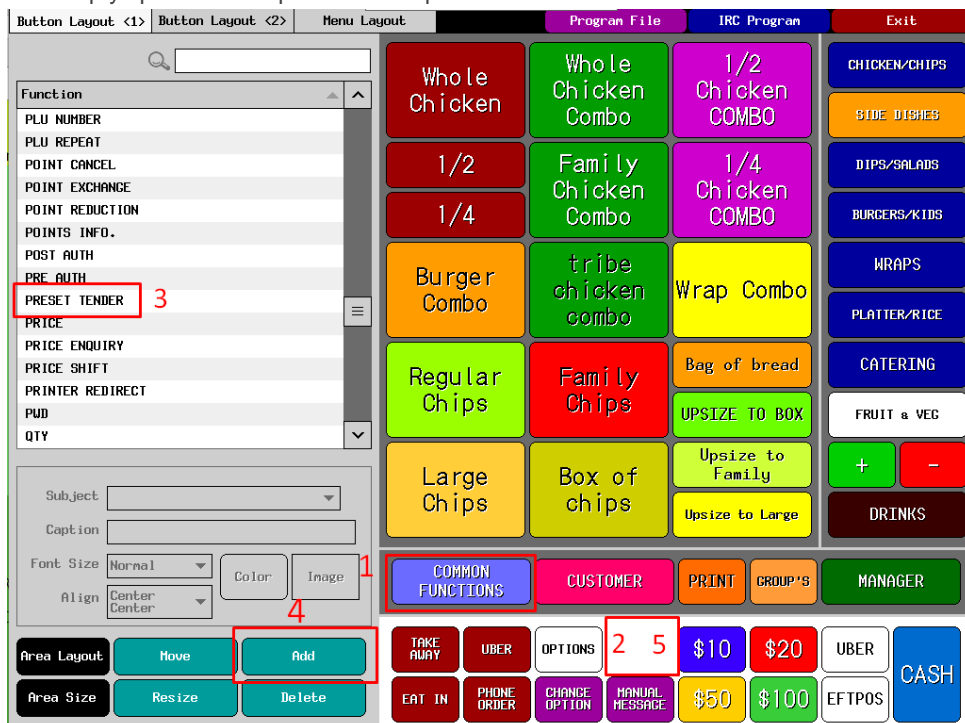

- Click on the new preset tender and on the left select the value and edit the caption to suit.

The screenshot displays a POS system interface. On the left, a 'Function' list includes 'PRESET TENDER'. Below it, the 'PRESET TENDER' configuration window is open, showing 'Subject' and 'Caption' both set to '\$5'. Red arrows point to these fields. The main menu area contains various food items in colored buttons, such as 'Whole Chicken', 'Burger Combo', and 'Regular Chips'. At the bottom, there is a bar with buttons for 'TAKE AWAY', 'UBER', 'OPTIONS', '\$5', '\$10', '\$20', 'EAT IN', 'PHONE ORDER', 'CHANGE OPTION', 'MANUAL MESSAGE', '\$50', '\$100', 'EFTPOS', and 'CASH'.

- Repeat for all remaining Preset Tenders, press EXIT to save and exit.

**\*\*\* End Of Self Help Instructions \*\*\***